## Cleaning parts in the IFB bath





Part before cleaning



Insert part to be cleaned into the basket



View of the part in the basket



## IFB51 setup with fume extraction accessories



View inside the extraction collar



Insert the basket with part into the bath at temperature



*Immerse the basket into the bath and cover with the lid* 



Small amount of fumes & smoke are exhausted out to the right



*Typically 25 minutes at burn-off temperature will work well* 



Exhaust extraction out the roof stack



IFB51 at temperature in Celsius



Remove the hot basket with cleaned part, safety first



Close up of clean part though still hot



Cleaned part being quenched in a bucket of water



Part disassembled to show how well it was cleaned